


# KNC-HMI-GL100 Series

16.77m True Color
32-Bit 800 MHz ARM RISC CPU
Real-Time Clock, Reserve Time for More than 2 Years at Power Off State
2 COM Ports, Supports Simultaneous Communications, Supports RS232/RS485/ RS422
24 VDC Input Voltage
CE Certified
128MB NAND FLASH + 128MB DDR3 Memory
Ethernet Models Available



The Green Series GL100 is the most modern and powerful HMI product that will make your application work seamlessly, without missing a step. The GL100 Series has a new structure and elegant body, compared to previous HMI's. This HMI line comes with a 16.77 Million Color Display mode that gives your touch screen rich color and incomparable resolution. The Green Series products use the most advantageous ARM Cortex-A7 architecture industrial-grade processors, which ensure that the HMI's work efficiently. Each HMI supports simultaneous communications via its multiple serial ports, so that you can connect to different controllers and PLCs at the same time. With the simple, convenient and powerful DTools configuration software, the user can master its design method and create first-class programs efficiently.

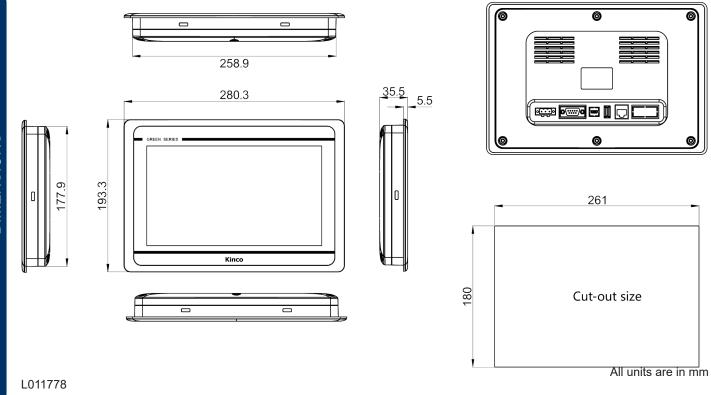

FEATURES

DESCRIPTION

DIMENSIONS

# KNC-HMI-GL100



MODEL	GL100	GL100E		
Performance Specification				
Display	10.1" TFT			
Display Area	227.72 (W) x 125.28 (H) (mm)			
Resolution	1024x600 pixels			
Display Color	16.77 Million	n True Color		
Display Angle of View	70/70/60/70(left	/right/up/down)		
Contrast Ratio	50	0:1		
Backlight	LED			
Brightness	400cd/m2			
Backlight Life	More than 30000 Hours			
Touch Panel	4 Wire Precision Resistance Network (Surface Hardness 4H)			
CPU	ARM RISC 32Bit 800MHz			
Storage		ry + 128MB DDR3 Memory		
RTC	Built-in			
Expandable Memory	1 USB Host			
Print Port	USB Host/Serial Port			
Ethernet	None	10/100MHz Adaptable Ethernet Interface		
Program Download	USB Slave Micro / USB Flash Drive USB Slave Micro / USB Flash Drive / E			
Communication Port				
Electrical Specification				
Input Power Supply	DC10V ~ DC28V			
Power Input Allowable Loss of Power	6W@24VDC			
Insulation Resistance	<3ms			
Hi-pot Test	Over 50MΩ@500VDC 500 VAC 1 Minute			
Structure Specification				
Shell Material	Engineeri	ng Plastic		
Shape Size	Engineering Plastic 280 x 193 x 36 (mm)			
Installation Hole Size	260 x 193 x 36 (mm) 261 x 180 (mm)			
Weight	1.98 lbs			
Environment Specification				
Working Temperature	0 ~ 50°C			
Working Humidity	10 ~ 90%RH (non-condensing)			
Storage Temperature	-20 ~ 60°C			
Storage Humidity	10 ~ 90%RH (non-condensing)			
Vibration Test	10 ~ 500Hz (X, Y, Z direction 2G/30 minute)			
Cooling Mode	Natural Air Cooling			
Certification				
Panel Protection Grade	Conforming to IP65 Certification(4208-93)			
CE Certification	EN6100-6-4:2007,EN61000-6-2:2005			
Software				
Configuration Software	Kinco DTools V3.2 and Above			



### 1. Installation Note

#### 1.1 Environment Requirement

Operating temperature: GL100/GL100E HMI can work stably in most industrial environments when the temperature is between 32°F to 122°F (0~50°C). NEMA rating: HMI front panel is NEMA1 rated.

#### Do not install this HMI in the following environments:

- Areas with direct sunlight
- Environments where the surrounding temperature or humidity exceed specifications
- Areas with high condensation. Avoid areas where temperature changes dramatically or

sharply, as these changes can cause condensation

- · Areas with corrosive or combustible gas
- Environments where dust, dirt, salt, or iron powder are present
- Avoid water, oil, and vapor
- Areas in which the HMI will be subject to vibration or shock

#### Take shielding measures in the following locations:

- Anywhere electrostatic noise or electromagnetic noise is present
- Any location where X-rays or microwaves are present
- Near power sources

#### **1.2 Power Requirement**

Input Voltage: DC10V~DC28V

• Maintain sufficient distance between the HMI and any converters or switching mode power supplies. Ensure that the input and output cables of such equipment are shielded cables, and that the shielding network is properly connected to ground.


• Ensure that the DC power and AC power are isolated

**Note:** An internal fuse will prevent damage for over-voltage, but does not guarantee protection against damage of internal electronic components.



## 2. Installation Description


### 2.1 Dimensional Drawing

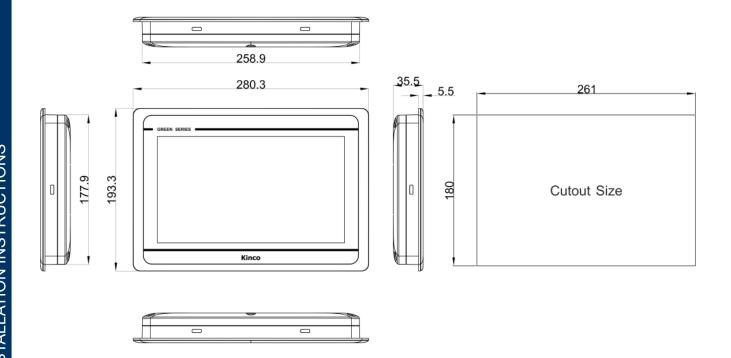

All units are in mm


INSTALLATION INSTRUCTIONS

 4985 E. Landon Drive Anaheim, CA 92807 Tel. (714) 992-6990 Fax. (714) 992-0471 www.anaheimautomation.com



#### 2.2 Fixed Screw Installation Instructions

The product is placed into the cut out of the machine control box's panel, and the mounting screws are inserted into the fixing holes around the HMI shell from the back of the control box's panel. Recommended lock torque: 0.5N.m (for waterproof effect and to avoid shell deformation)

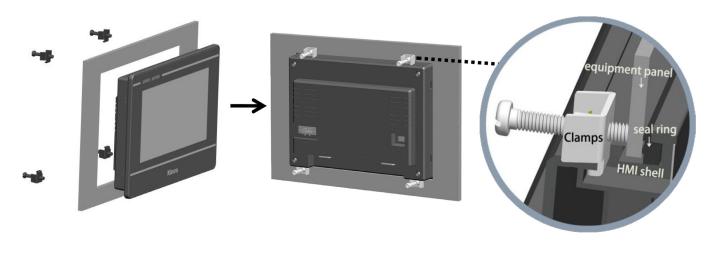


#### 2.3 Power Connection

Before connecting the power, please make sure all local and national electrical standards are met. For power cables, please select cables with their dielectric strength values and current values in compliance with the safety specifications. First, find the power terminal at the back of the product and loosen the screw, by turning it counterclockwise. Then, insert the power cables and tighten the screw. Connect positive DC line to the 'DC24V' terminal, the DC ground to the 'GND' terminal and the earth or machine ground line to the 'FG' terminal.



### 3. External Interface

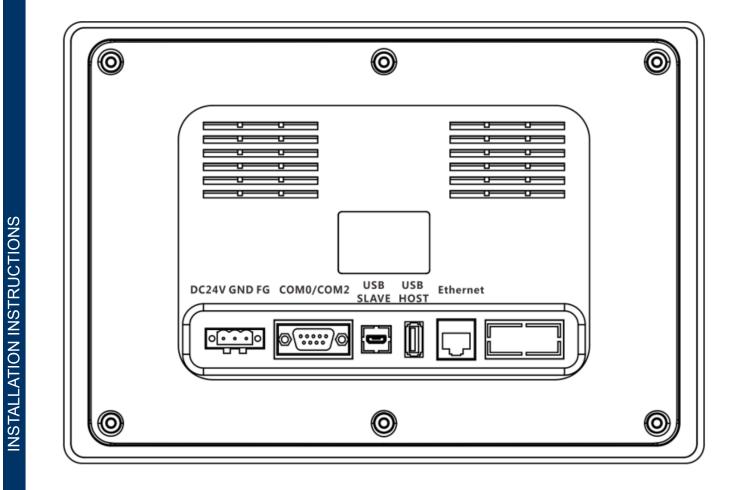


#### 3.1 Power

Pin	Signal
1	DC24V
2	GND
3	FG


 
#### 3.2 COM0/COM2



Pin assignment of the 9-pin male, D-SUB, COM0/COM2. Note: RS232/485/422 communication functions are supported by COM0. COM2 supports RS232 communication function.

Pin	Signal	PLC (C0M0) [RS-422]	PLC (C0M0) [RS-485]	PLC (C0M0) [RS-232]	PC/PLC (C0M2) [RS-232]
1	Rx- (B)	RS422 R-	RS485 B		
2	RxD_PLC			RS232 RxD	
3	TxD_PLC			RS232 TxD	
4	Tx-	RS422 T-			
5	GND	Signal Ground			
6	Rx+ (A)	RS422 R+	RS485 A		
7	RxD_PC				RS232 RxD
8	TxD_PC				RS232 TxD
9	Tx+	RS422 T+			

#### 3.3 USB SLAVE

The interface type is MicroUSB

Connection	USB Slave port can be connected with a PC.
Port Function	The port is only used to download the user configuration pro- gram to the HMI and to set HMI system parameters.

#### 3.4 USB HOST

Connection	Connect with USB interface devices or USB Flash Drives.
	This interface can be connected with USB keyboard, mouse and printers, and the USB Flash Drives can be used for user's configuration uploading/downloading as well as data storage.

### 3.5 Ethernet (Only GL100E support)

10M/100M adaptive Ethernet RJ45 port

Connection	With CAT5 UTP cable connected to the Ethernet device.
Port Function	The port can be used for upload/download of HMI configura- tion, setting of system parameters and online simulations of configurations. It can connect multiple HMIs via the Ethernet to form an HMI network. Furthermore, it can implement communi- cations between the HMI and PLC via the Ethernet, as well as communications with a PC via the Ethernet port.